

LASERLYTE

www.laserlyte.com



Super-Bright

UNIVERSAL RAIL MOUNT LASER SYSTEM — Slide Switch Super-Bright—LRS-0635-SSW

This mount utilizes a unique claw-type system that securely attaches the laser sight to the pistol or long gun mounting rails. The mount is precision CNC machined from aircraft-grade aluminum for maximum strength and durability.

Fits all firearms with Weaver/Picatinny-Type Rails and Mounting Bases, including:

- All Glock models
- Taurus: PT 92 AR, PT 24/7
- Springfield Armory: XD9
- Smith and Wesson: SW99
- Walther: P22
- Beretta: 92
- Heckler and Koch: P2000 Series



- 1,000 Yard Range
- Ambidextrous Wireless Slide Switch
- Adjustments for windage and elevation
- 635 nm laser module
- One Year Limited Warranty

PARTS INCLUDED



 
DANGER

LASER LIGHT
AVOID DIRECT EYE EXPOSURE

POWER OUTPUT <5mw
WAVELENGTH 630-670nm
CLASS IIIa PRODUCT



UNIVERSAL RAIL MOUNT LASER SYSTEM — Slide Switch

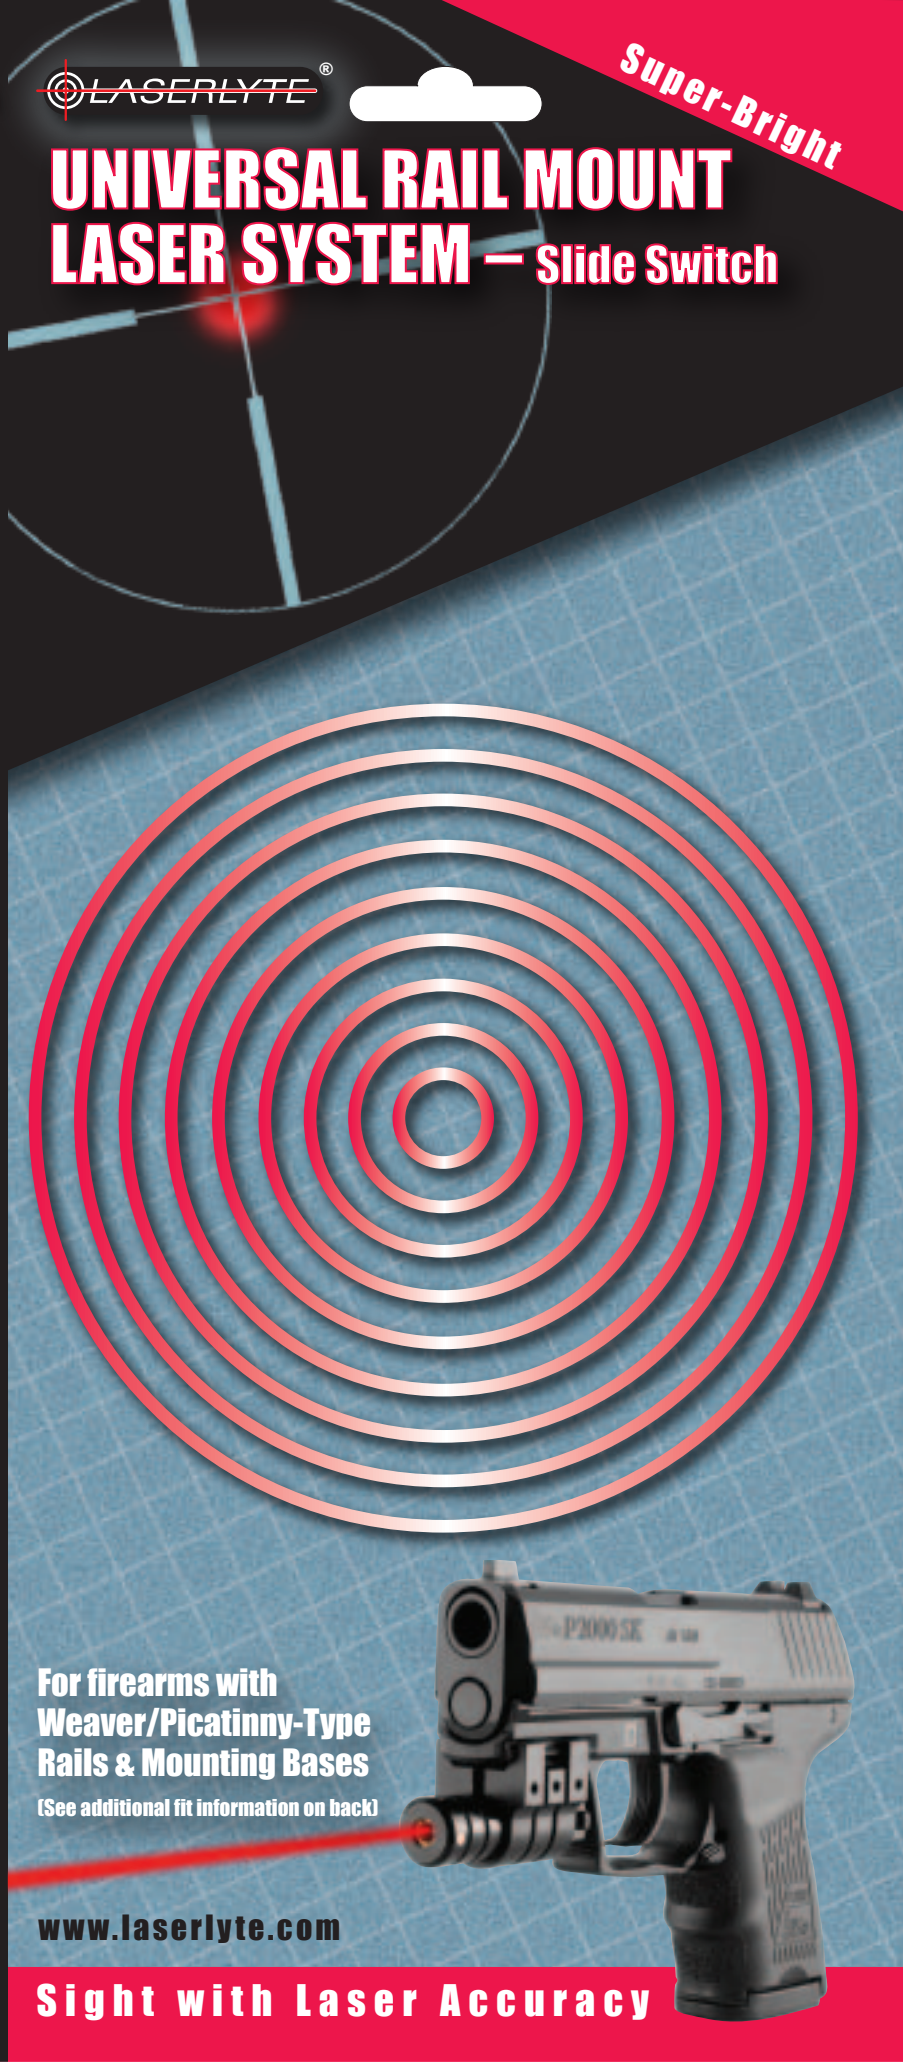

For firearms with Weaver/Picatinny-Type Rails & Mounting Bases

 
(See additional fit information on back)

www.laserlyte.com

Sight with Laser Accuracy

UNIVERSAL RAIL MOUNT LASER SYSTEM

LRS-0650-SSW & LRS-0635-SSW INSTALLATION AND OPERATING INSTRUCTIONS

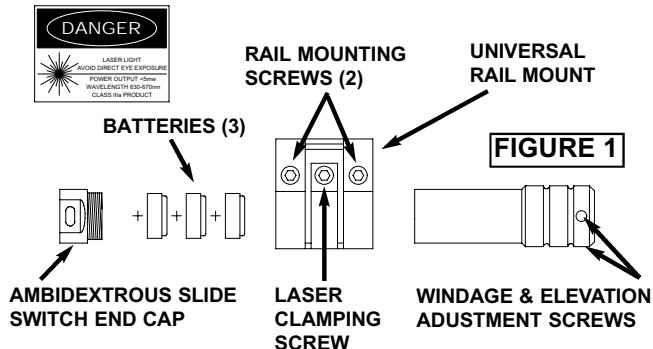


CAUTION: AVOID DIRECT EYE EXPOSURE TO THE LASER LIGHT. NEVER POINT THE LASER TOWARD ANYONE'S EYES.

CLAMPING LASER IN MOUNT

Referring to Figure 1, place the Laser Body into the Universal Rail Mount. Position the Laser Body so that 1 adjustment screw is facing the (either) side and 1 adjustment screw is facing the bottom. Once the Laser Body is placed correctly in the mount, tighten the center clamping screw (with hex wrench supplied). Place the 3 batteries in the rear of the laser (with the positive sides towards the rear) and install the Ambidextrous Slide Switch End Cap. When tightening the End Cap position it so the slide switch is sideways as shown in Figure 1.

 BEFORE PROCEEDING MAKE SURE YOUR FIREARM IS UNLOADED!

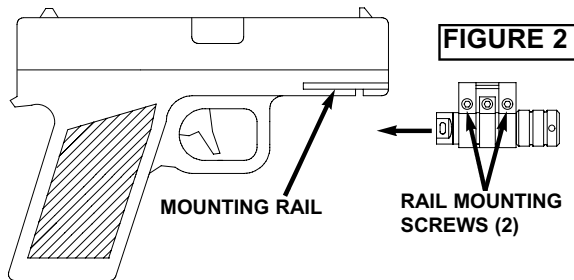


PLACING MOUNT AND LASER ON PISTOL

Referring to Figure 2, slide the mount with laser on to the pistol's mounting rails. Position the laser's switch in front of the trigger guard in a proper location for easy operation (refer to figure 3). When properly positioned tighten the 2 outside mounting screws.

OPERATION OF LASER

 When the Laser & Mount have been properly installed on the pistol, the Ambidextrous Slide Switch should be directly in front of the trigger guard, for easy access. To turn "On" the laser, press either side of the switch inward until it clicks. To turn the laser "OFF" press the switch back to the centered position.

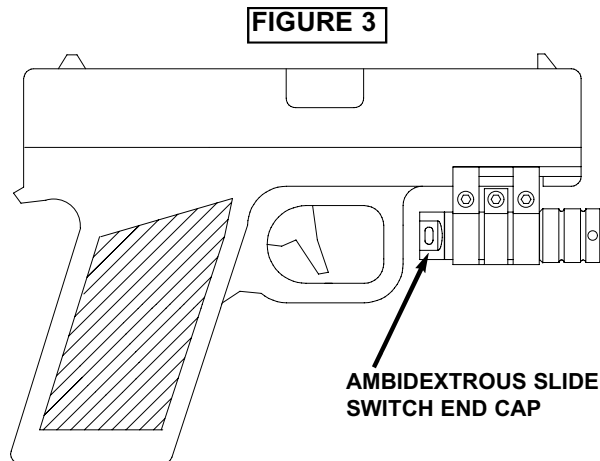

"SIGHTING-IN" THE LASER

Adjust the laser dot using the windage and elevation adjustment screws until the dot corresponds to your iron sights. Do this at the distance your firearm is sighted-in at. Fine adjustments can be made at the range by adjusting the laser according to bullet impact.

BATTERY REPLACEMENT

Expected Battery Life:

LRS-0650-SSW & LRS-0635-SSW

Both units will operate for approximately 2 hours continuous on a single set of batteries

This amount of operating time when used in short bursts will last much longer before battery replacement would be required. These units operate on 3 #A-76 batteries which are inexpensive common watch/calculator batteries. Many manufacturers make them under different numbers such as LR-44, AG13, G13-A, etc. When replacing the batteries, remove the Laser & Mount from the pistol, unscrew the End Cap, remove old batteries and replace with new. Note: positive side of batteries go toward the End Cap.

WARRANTY

The Laser is warranted for one year from any manufacturer's defects from the date of purchase.

For information on other great products from LaserLyte check out our web-site at www.LaserLyte.com or call us at 928-649-3201.



101 AIRPARK RD. - COTTONWOOD, AZ 86326
Phone 928-649-3201 - Fax 928-649-3970