



— Accuracy Defined —


MOUNTING RAIL ADAPTER

**Fits .40
& .45 Cal.**

**Hi-Point
Pistols &
Compensator Rails**




INSTRUCTIONS

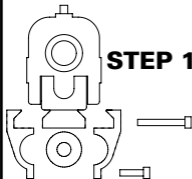

STEP 1

Place Laser inside mount and on pistols dovetail (as shown). Use the 2 screws supplied and tighten on the pistol with hex wrench included.

Position Laser as shown, with windage and elevation adjustments to the bottom and side.

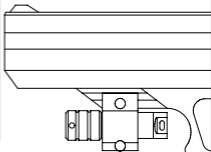

STEP 2



ADP-HIPT-140



101 Airpark Rd.
Cottonwood, AZ 86326
Tel. 928-649-3201
Fax. 928-649-3970
www.LaserLyte.com