



NORTH AMERICAN ARMS LASER 22LR & 22MAG

NAA-1

LaserLyte® presents the smallest laser and handgun combination in the world. The miniaturized unit clamps to the top of the handgun and provides laser accuracy. The LaserLyte NAA-1 laser sight adds true repeat shooting accuracy by providing a point of reference with a small red dot. This fully adjustable laser, once sighted-in, gives the user an extended shooting distance.

- Compatible Firearms: NAA-22LR, NAA-22MS, NA-22M, NAA-22LR
- Activation: Toggle Switch
- Mounting: Clamping
- Weight: .4 oz, 11.34 g
- Battery: 3 x 392
- Battery Life: 1.5 hours



NORTH AMERICAN ARMS LASER 22LR & 22MAG



DANGER

LASER LIGHT
AVOID DIRECT EYE EXPOSURE
POWER OUTPUT <5mw
WAVELENGTH 630-670nm
CLASS IIIa PRODUCT

RoHS

CE


Printed on recycled paper

6 89706 21024 3

NAA-1






NORTH AMERICAN ARMS 22LR, 22MAG

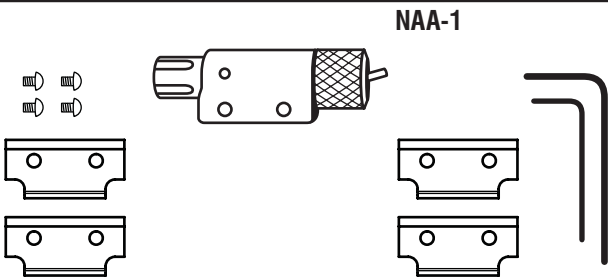

Installation:


- 1 REMOVE THE CYLINDER AND UNLOAD YOUR FIREARM!
- 2 Attach danger label to gun or laser with arrow pointing toward front sight.
- 3 Find the correct clamp for your gun. (22lr or 22mag)
- 4 Place the laser on top of the frame over the cylinder opening.
- 5 Place the clamps on both sides of the laser, line up holes thread screws.
- 6 Tighten the screws.
- 7 Turn the rear cap until the toggle switch is facing up away from gun.

- 1 REMOVE THE CYLINDER AND UNLOAD YOUR FIREARM!
- 2 Attach danger label to gun or laser with arrow pointing toward front sight

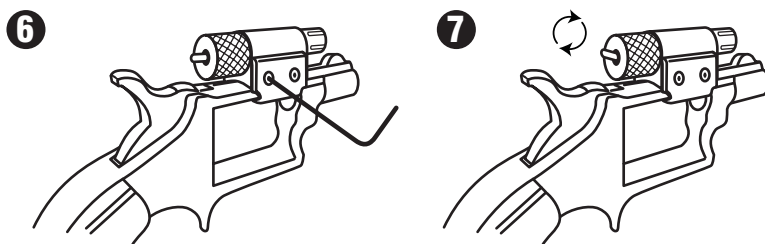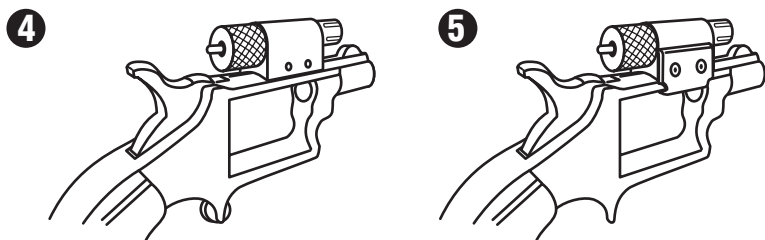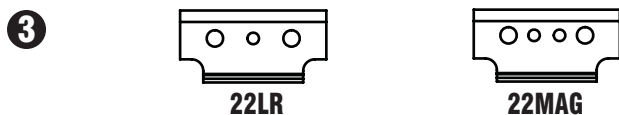


Adjustment:

- 1 Using the windage and elevation screws adjust the laser close to barrel alignment.
- 2 At the range from a steady rest fire and adjust dot until it corresponds to bullet impact.
- 3 Always end in a clock-wise motion.

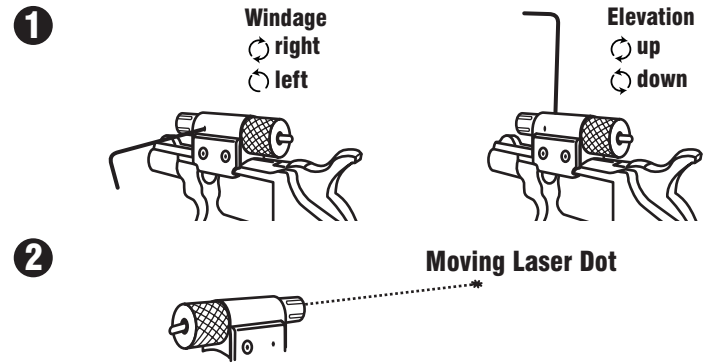

Activation:

- 1 To turn laser ON move the toggle switch down.
- 2 To turn laser OFF move the toggle switch up.

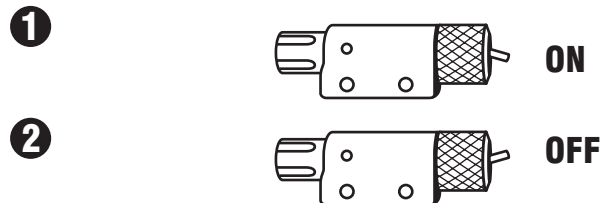

Battery Installation: (3) 392

- 1 Unscrew the activation switch from the back of laser.
- 2 Remove batteries.
- 3 Install new batteries.
- 4 Screw the activation switch into the laser with the toggle switch up.



WARRANTY:
One Year Limited
Warranty.



A Division of P&L Industries
101 Airpark Road - Cottonwood, AZ 86326
Phone 928-649-3201 - Fax 928-649-3970
www.LaserLyte.com